REPLACEMENT PARTS


To order parts, please give Part No., Description and Qty needed.

EAGLE CLAW FISHING TACKLE

ATTN: Shappell Parts Dept. 4245 E. 46th Ave., Denver, CO 80216

(720) 941-8723

MODEL DX4000 (58" x 92" Floor)

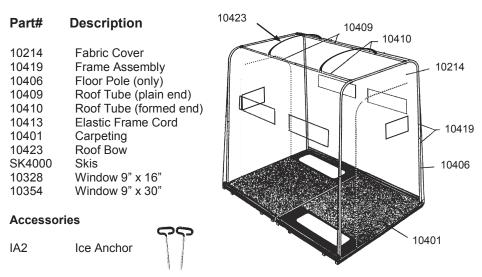

NOTE: Small holes, tears and cuts in cover can be repaired with black duct tape applied to coated side of fabric.

CONSUMER WARRANTY

Eagle Claw Shappell® warrants its products against defects in material and workmanship for one (1) YEAR from date of purchase. We will provide FREE repair or replacement, in whole or in part, at our option, for any product, found in our opinion to be defective. If return is required, freight must be prepaid. This warranty does not cover freight damage, ordinary wear and tear, abuse, misuse or altered product.

WINDOWS ARE NOT GUARANTEED AT TEMPERATURES BELOW -15 DEGREES FAHRENHEIT.

For warranty claim, send letter indicating product and explanation of defect plus dated proof of purchase to Eagle Claw Fishing Tackle, ATTN: Warranty Dept., 4245 E. 46th Ave., Denver, CO 80216.

LOT #:

SHAPPELL CLAW.

DX4000

PORTABLE ICE FISHING SHELTER



IMPORTANT SAFETY INFORMATION



WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

<u>c</u>

CARBON MONOXIDE POISONING HAZARD: This shelter is nearly air tight and must be ventilated if using an oxygen consuming heat source. An extra zipper pull at the top of each door provides ventilation and can also be used to form a window for viewing. DO NOT PACK SNOW AROUND SHELTER or in any way prevent fresh air from entering shelter. Failure to ventilate shelter could create a serious health hazard or death.

Towing of shelter with a motorized vehicle is not recommended.

PREVENT DAMAGE TO HINGE JOINT: Always set shelter on a level flat surface.

MAINTENANCE: After each use, set up shelter until fabric is completely dry. **Never leave shelter folded closed with a wet cover.**

NOTICE: It is normal for fabric to have some pinholes. This does not affect water repellency.

READ SETUP & TAKEDOWN INSTRUCTIONS BEFORE USING SHELTER


REV 0816


SET UP INSTRUCTIONS


- 1) Open floor on a flat, level surface, with a door end facing the wind. Damage to Hinge Joint may occur if Floor is not evenly supported.
- 2) Assemble Roof Tube sections.




3) Fig. 1, Raise one U Shaped Frame. Keep Frame about 24" away from Corners of Fabric Top and Slip ends of U Frame over Crimped ends of Floor Poles...Shock Cord will pull Frame together. Push Assembled Frame into Corners of Fabric Top and adjust Seam in Fabric so that it follows the Curve of the Frame. Snap end of a Roof Tube Assembly to U Frame and Support Frame as shown in Fig. 2.

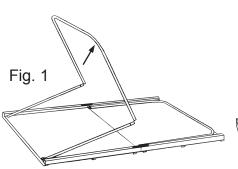

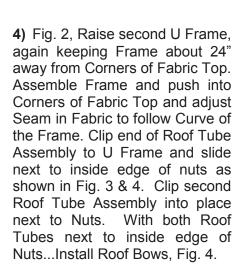


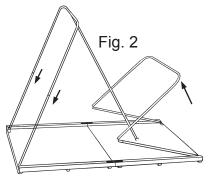

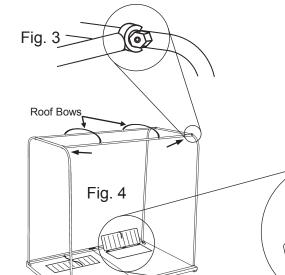

TAKE DOWN INSTRUCTIONS

1) Fig. 5, Remove Roof Tubes from one U Frame and use one Roof Tube to Support other U Frame as shown. Pull U Frame away from Fabric Corners, then pull apart and Fold Frame to Floor while keeping Fabric away from Frame. Do Not Wrap Fabric Around Frame. NOTE: U Frame should lay inside of the Floor Poles, not on top of them. Repeat for other U Frame, Fig 6.

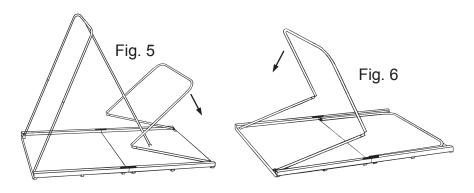

2) Fold Tent as shown in Fig. 7,8,9,10 and11.

